


REMOVAL AND INSTALLATION > WINDSHIELD WIPER PIVOT ARM > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Raise the windshield wiper pivot arms into the SERVICE-UP position.

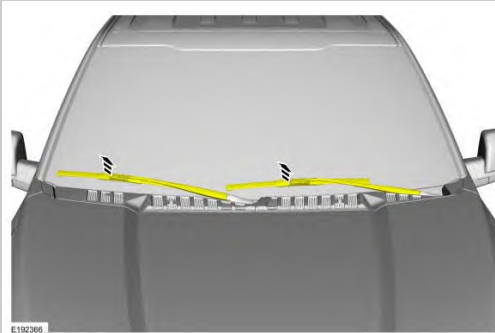

2.



NOTE: During installation, it is necessary to fully release the windshield wiper pivot arm latch and hold while installing the pivot arm onto the wiper linkage assembly.


Remove the windshield wiper pivot arms.

1.

Release the windshield wiper pivot arm latch.

2.

Remove the windshield wiper pivot arm.

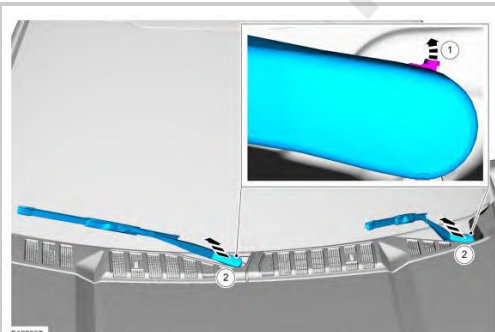

REMOVAL AND INSTALLATION > WINDSHIELD WIPER PIVOT ARM > INSTALLATION

1.