


Torque

: 18 lb.ft (25 Nm)



21.

Inspect the body-to-rear door dimensions. Refer to: Body and Frame .

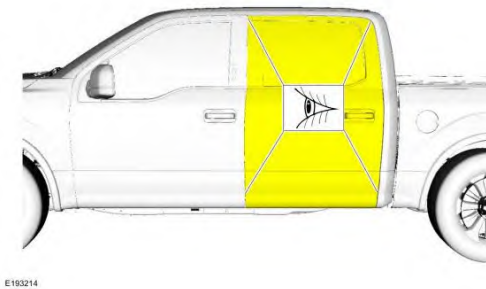

22.

Install the removed components.

During installation, make sure the safety belt webbing is not twisted and the safety belts and buckles are accessible to the occupants.

REMOVAL AND INSTALLATION > FRONT DOOR - REGULAR CAB/SUPERCREW > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.




NOTE: LH side shown in illustration, RH side similar.

1.

Remove the check arm bolt.


Torque

: 17 lb.ft (22.5 Nm)

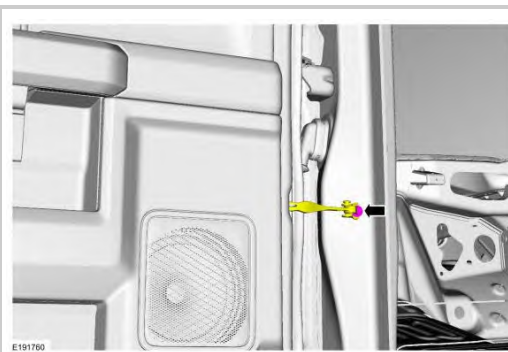

2.

Disconnect the front door electrical connector.

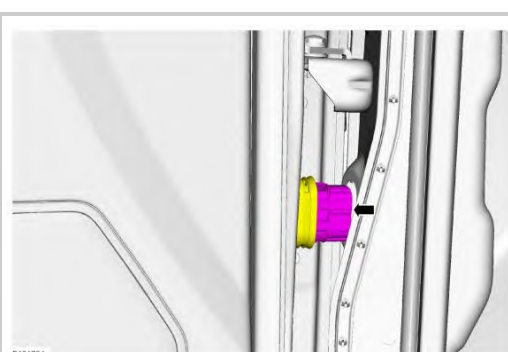

3.



NOTE: This step requires the aid of another technician.

Remove the door hinge pivot bolts.

Torque

: 22 lb.ft (30 Nm)

