



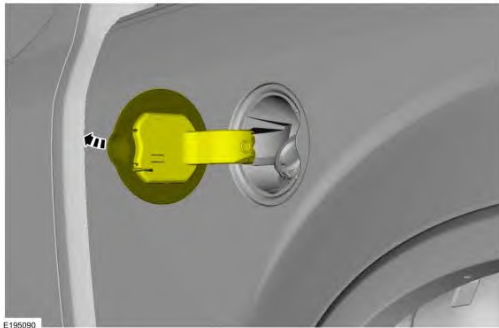

2.


Using a screwdriver, pry the retaining tab back and slide the fuel filler door from the fuel filler door hinge.

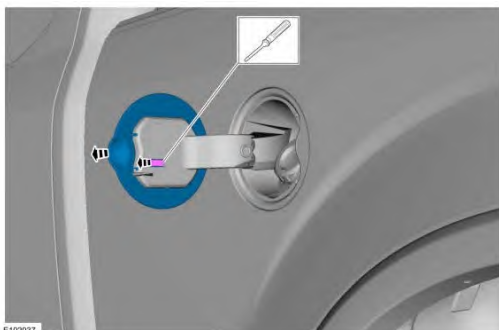

REMOVAL AND INSTALLATION > FUEL FILLER DOOR > INSTALLATION

1.

Slide the fuel filler door onto the fuel filler door hinge.

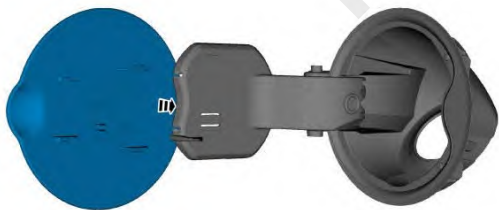

REMOVAL AND INSTALLATION > FUEL FILLER DOOR ASSEMBLY > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

3.


Remove the fuel filler door. Refer to: Fuel Filler Door .

4.

Remove the bolt and pull the fuel tank filler pipe from the fuel filler door assembly.


Torque

: 133 lb.in (15 Nm)

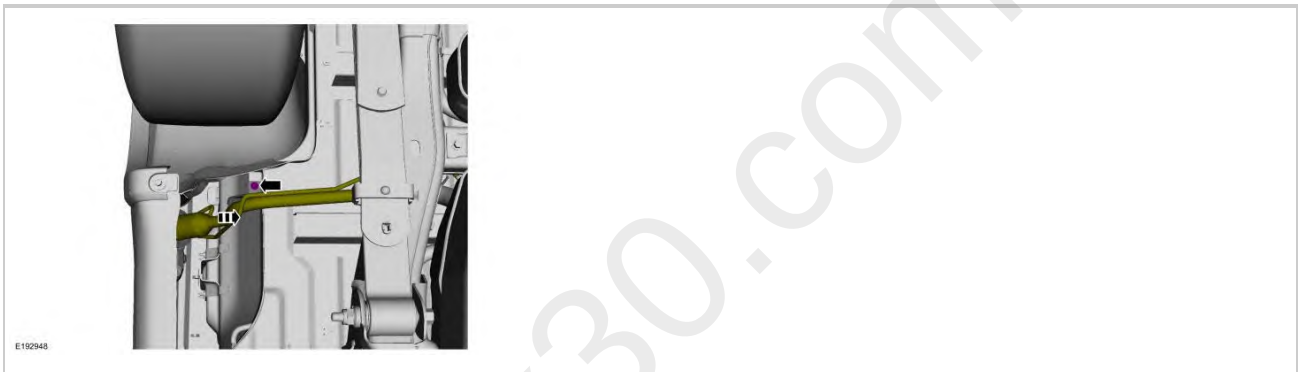

5.

Unseat the fuel filler door assembly boot from inside the wheel opening.

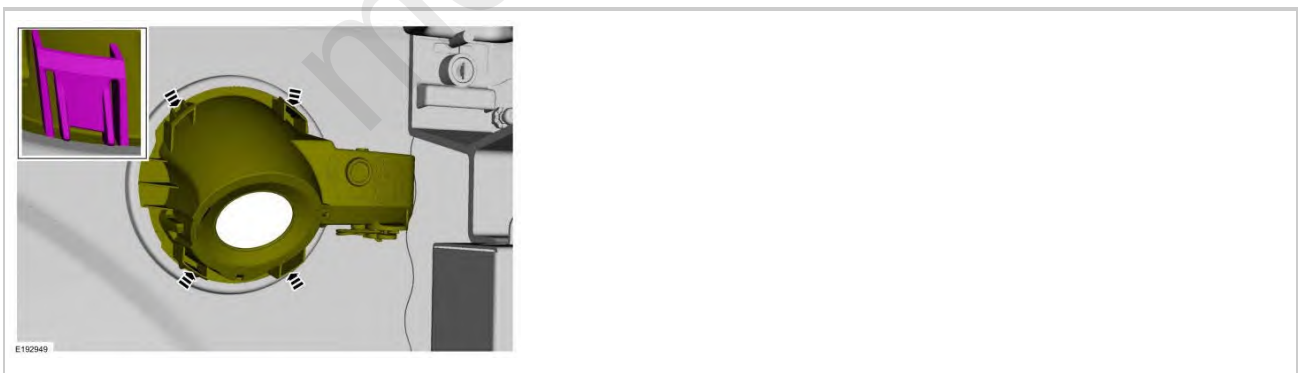

6.

 **NOTE:** Clearance is limited. When all four clips release, the housing can be rotated.

Rotate the housing.