

4.



NOTE: This step requires the aid of another technician.

Remove the door.



REMOVAL AND INSTALLATION > REAR DOOR - SUPERCAB > INSTALLATION



NOTE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.

1.

To install, reverse the removal procedure.

2.

Check the door-to-body alignment. Align the door as necessary. Refer to: Rear Door Alignment - SuperCab .

REMOVAL AND INSTALLATION > REAR DOOR - SUPERCREW > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.




NOTE: LH side shown in illustration, RH side similar.

1.

Remove the check arm bolt.


Torque

: 17 lb.ft (22.5 Nm)

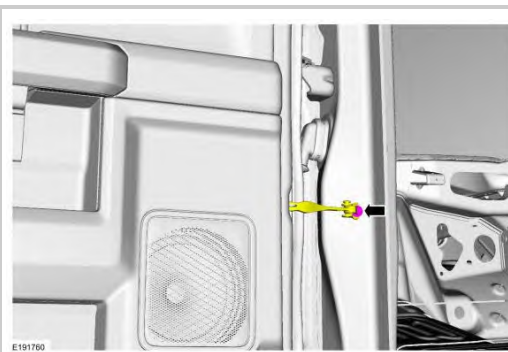

2.

Disconnect the rear door electrical connector.

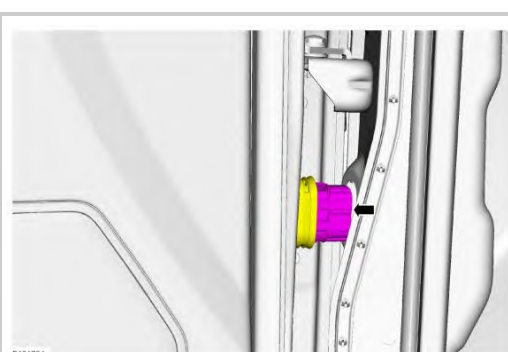

3.



NOTE: This step requires the aid of another technician.

Remove the door hinge pivot bolts.

Torque

: 22 lb.ft (30 Nm)

