

Service Manual: BODY SYSTEM BUMPERS

REMOVAL AND INSTALLATION > FRONT BUMPER > REMOVAL

1.

Raise the vehicle on a hoist. Refer to: Jacking and Lifting - Overview .

2.

 **NOTE:** On both sides.

Disconnect the fog lamps and separate the wiring harness guides.



3.

 **NOTE:** On both sides.

Remove the air deflector push pin.



4.