

Torque

: 129 lb.ft (175 Nm)



Vehicles with trailer tow package

7.

With the help of an assistant, remove the nuts and the rear bumper assembly.

Torque

: 129 lb.ft (175 Nm)



REMOVAL AND INSTALLATION > REAR BUMPER > INSTALLATION

1.

To install, reverse the removal procedure.

DISASSEMBLY AND ASSEMBLY > FRONT BUMPER > DISASSEMBLY



NOTE: Disassembly steps in this procedure may contain assembly details.

All vehicles

1.

Remove the front bumper. Refer to: Front Bumper .

2.


Remove the front bumper upper trim plate.

1.

Drill out the rivets.

2.

Remove the pin-type retainers.

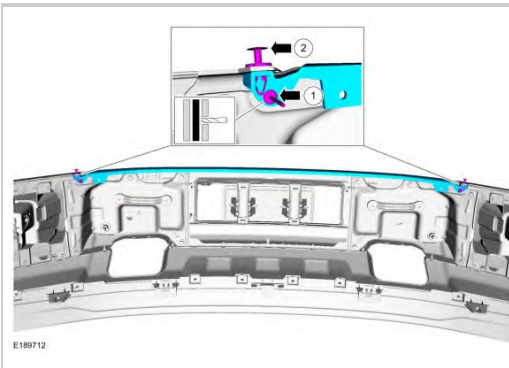


3.

 **NOTE:** On both sides.

Remove the bolts and the front bumper brackets.

Torque

: 18 lb.ft (25 Nm)

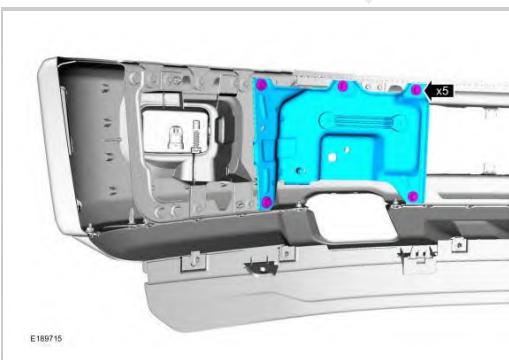

4.

Remove the CCM bracket.

1.

Remove the CCM bracket bolts.

Torque

: 42 lb.in (4.8 Nm)

2.

Remove the CCM bracket scrivet.




5.

 **NOTE:** On both sides.

Remove the fog lamp bolts, push pins and the fog lamp assembly.

Torque

: 48 lb.in (5.4 Nm)

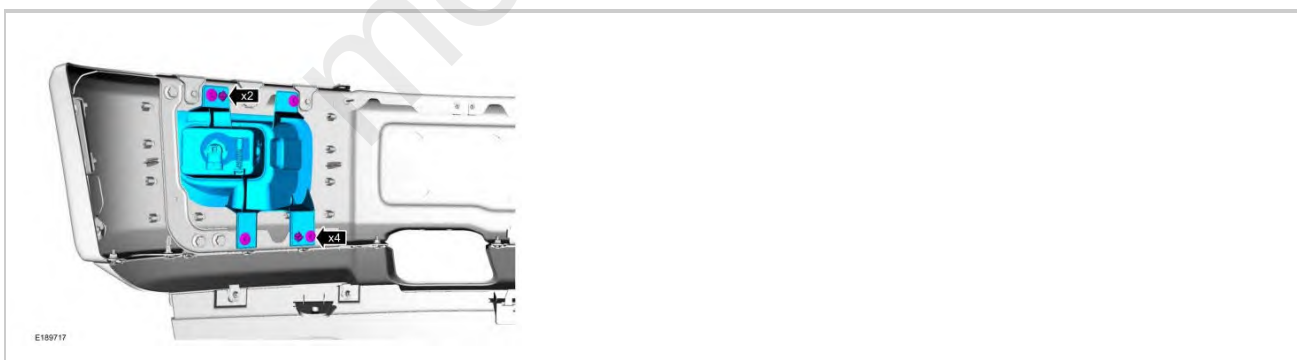


6.

 **NOTE:** On both sides.

Remove the bolts and the front bumper outer bracket.


Torque

: 18 lb.ft (25 Nm)

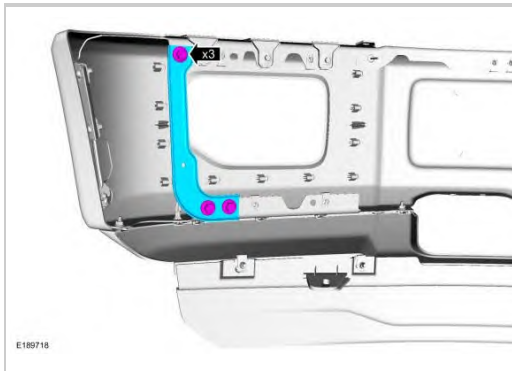

7.

Remove the bolts and the front bumper air deflector.

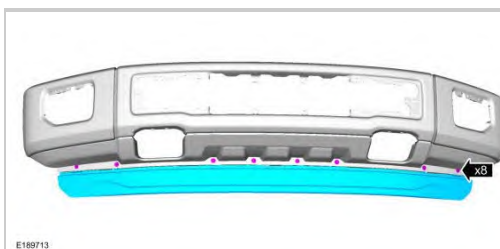

Vehicles with tow hooks

8.




NOTE: On both sides.

Remove the front valence screws.

Torque

: 10 lb.in (1.1 Nm)

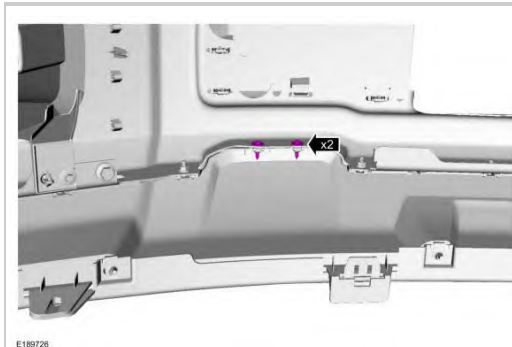

All vehicles

9.