

Vehicles without trailer tow package

9.

Remove the bolts and the rear bumper bar.

Torque

: 18 lb.ft (25 Nm)



All vehicles

10.

Remove the bolts and the outer bumper brace.

Torque

: 18 lb.ft (25 Nm)



DISASSEMBLY AND ASSEMBLY > REAR BUMPER > ASSEMBLY

1.

To assemble, reverse the disassembly procedure.