


7.

 **NOTE:** The upper active grille shutter actuator is not interchangeable with the lower active grill shutter actuator. Do not attempt to replace one actuator with the other.

Remove the lower active grille shutter actuator.

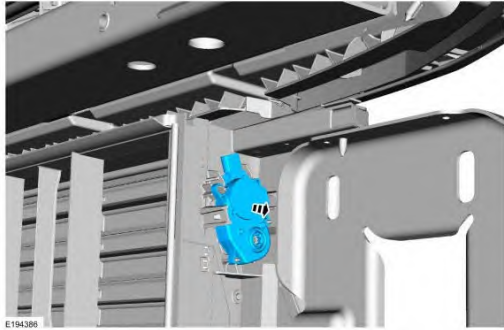

REMOVAL AND INSTALLATION > ACTIVE GRILLE SHUTTER ACTUATOR > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > COWL PANEL > REMOVAL

 **NOTE:** Removal steps in this procedure may contain installation details.

1.

Remove the cowl panel grille. REFER to: Cowl Panel Grille .

2.

Remove the LH cowl panel.

1.

Remove the screw.

2.

Remove the pin-type retainers and the LH cowl panel.