



6.

 **NOTE:** An assistant is necessary for the removal of the hood.

Remove the nuts and the hood.

Torque

: 18 lb.ft (25 Nm)



REMOVAL AND INSTALLATION > HOOD > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Check the hood alignment. Align the hood as necessary. REFER to: Hood Alignment .

REMOVAL AND INSTALLATION > ENGINE REAR UNDERSHIELD

1.