


 **NOTE:** Support the engine rear undershield while the fasteners are being removed and installed. Do not support the engine rear undershield by any less than the total number of fasteners at any time.

Holding the shield in its correct position, remove the fasteners and the engine rear undershield.

Torque

: 71 lb.in (8 Nm)

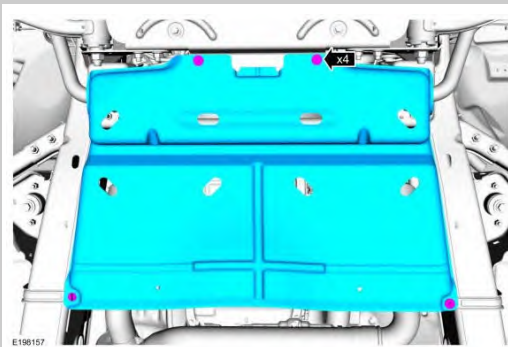

REMOVAL AND INSTALLATION > ENGINE FRONT UNDERSHIELD

1.

 **NOTE:** 4X2 vehicle shown in illustration, 4X4 vehicle similar.

Remove the engine front undershield.

1.

Remove the bolts.

Torque


: 30 lb.ft (40 Nm)

2.

Remove the bolts and the engine front undershield.

Torque

: 71 lb.in (8 Nm)

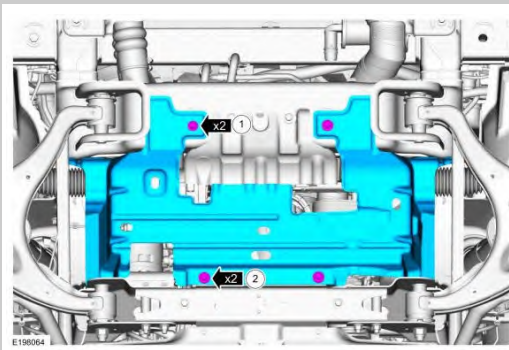

mcx30.com