

Panel - SuperCrew .

Install the interior door handle back onto the release cable.

Operate the interior door handle while observing the cable/linkage.

Are any of the interior door handle components or cable/linkages binding or broken?

Yes	REPAIR as necessary.
No	INSTALL a new door latch. REFER to: Front Door Latch . REFER to: Rear Door Latch - SuperCrew .

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST D : THE EXTERIOR DOOR RELEASE HANDLE STICKS

Normal Operations and Fault Conditions

The exterior door handle is connected to the door latch with an actuating cable. When the exterior door handle is pulled, the actuating cable pulls on the latch lever. When the latch lever moves, the door latch releases, allowing the door to open. The handle has a return spring to make sure the handle returns to a closed position.

Possible Causes

- Broken or binding cable/linkage
- Broken handle return spring
- Door latch

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST D : THE EXTERIOR DOOR RELEASE HANDLE STICKS > PINPOINT TEST D : THE EXTERIOR DOOR RELEASE HANDLE STICKS

D1 CHECK FOR A BROKEN RETURN SPRING

Remove the door trim panel. REFER to: Front Door Trim Panel . REFER to: Rear Door Trim Panel - SuperCrew .

Disconnect the exterior door handle actuating cable from the door latch.

Pull and release the exterior door handle.

Does the exterior door handle return to a closed position once released?

Yes	GO to D2
No	INSTALL a new exterior door handle. REFER to: Exterior Front Door Handle . REFER to: