



All vehicles

8.

Install the roof outer panel. Refer to: Roof Panel - Regular Cab . Refer to: Roof Panel - SuperCab . Refer to: Roof Panel - SuperCab, Vehicles With: Roof Opening Panel . Refer to: Roof Panel - SuperCrew . Refer to: Roof Panel - SuperCrew, Vehicles With: Roof Opening Panel .

REMOVAL AND INSTALLATION > ROOF REINFORCEMENT - REGULAR CAB

Special Tool(s) / General Equipment

6.5 mm Drill Bit
Self-Piercing Rivet (SPR) Remover/Installer
Belt Sander
Blind Rivet Gun

REMOVAL AND INSTALLATION > ROOF REINFORCEMENT - REGULAR CAB > REMOVAL

1.

Remove the roof outer panel. Refer to: Roof Panel - Regular Cab .

2.

Remove the roof reinforcement SPR fasteners. Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer Use the General Equipment: Belt Sander