



4.

Install the roof outer panel. Refer to: Roof Panel - Regular Cab .

REMOVAL AND INSTALLATION > ROOF REINFORCEMENT - SUPERCAB

Special Tool(s) / General Equipment

Self-Piercing Rivet (SPR) Remover/Installer

Belt Sander

Blind Rivet Gun

Locking Pliers

REMOVAL AND INSTALLATION > ROOF REINFORCEMENT - SUPERCAB > REMOVAL



NOTE: Roof reinforcement is provided as 3 service parts (roof reinforcement and K-braces), the following procedure assumes all components are to be replaced.



NOTE: Specific technical details including, but not limited to, fastener and adhesive information is included in the Instruction Sheet for each service part (found in the service part packaging). Instruction Sheets can also be found on the PTS (Professional Technician Society) located under the Service Tips tab for this vehicle.

1.

Remove the roof outer panel. Refer to: Roof Panel - SuperCab .

2.

Remove the SPR fasteners as indicated. Use the General Equipment: Self-Piercing Rivet (SPR) Remover/Installer Use the General Equipment: Belt Sander