

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - OVERVIEW > OVERVIEW

The power door lock/unlock feature locks or unlocks the doors upon a customer request from a door lock control switch, the keyless entry keypad (if equipped), the passive entry system (if equipped) or a valid programmed RKE transmitter.

The tailgate comes equipped with either a power locking tailgate or a tailgate latch release.

The passive entry feature automatically locks or unlocks the doors, or releases the tailgate latch.

If equipped, the RKE transmitter provides a button for the remote start feature.

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - SYSTEM OPERATION AND COMPONENT DESCRIPTION

System Operation

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > NETWORK MESSAGE CHART

BCM Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Vehicle speed	PCM	The BCM uses the vehicle speed data for the autolock and auto-unlock features.
Door lock switch status	DDM/ PDM	Provides the BCM with lock/unlock requests based on the input from the door lock control switch.

IPC Module Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Message center feature configuration	IPC	Provides the BCM configuration settings selected by the driver of the vehicle, such as autolock and auto-unlock settings.

DESCRIPTION AND OPERATION > HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS