

		Passenger Door Module (PDM) .
U2100:00	Initial Configuration Not Complete: No Sub Type Information	PERFORM the PMI using as-built data. CLEAR the Diagnostic Trouble Codes (DTCs) and REPEAT the self-test. If the DTC returns, INSTALL a new PDM. REFER to: Passenger Door Module (PDM) .
U3000:04	Control Module: System Internal Failure	CLEAR the Diagnostic Trouble Codes (DTCs) and REPEAT the self-test. If the DTC returns, INSTALL a new PDM. REFER to: Passenger Door Module (PDM) .

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > DTC CHARTS > PCM DTC CHART

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

DTC	Description	Action
P1594	Forced Engine Shutdown - Remote Start System Fault, No Unattended Vehicle Timeout	GO to Pinpoint Test AD
P1595	Forced Engine Shutdown - Remote Start System Fault, Transmission Range Not In Park Position	GO to Pinpoint Test AD
All other Diagnostic Trouble Codes (DTCs)	-	Refer to the appropriate article for the procedure.

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > SYMPTOM CHARTS > SYMPTOM CHART: HANDLES, LOCKS, LATCHES AND ENTRY SYSTEMS - MECHANICAL

Diagnostics in this article assume a certain skill level and knowledge of Ford-specific diagnostic practices. REFER to: Diagnostic Methods .

Condition	Possible Sources	Actions
Hard to open or close a door from either door handle	Refer to the Pinpoint Test	GO to Pinpoint Test A
A door is difficult or does not open from the exterior door handle	Refer to the Pinpoint Test	GO to Pinpoint Test B
A door is difficult or does not open from the interior door handle	Refer to the Pinpoint Test	GO to Pinpoint Test C