

No	ADJUST the door as necessary. REFER to: Front Door Alignment - Regular Cab/SuperCrew . REFER to: Front Door Alignment - SuperCab . REFER to: Rear Door Alignment - SuperCrew .
-----------	--

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST B : A DOOR IS DIFFICULT OR DOES NOT OPEN FROM THE EXTERIOR DOOR HANDLE

Normal Operations and Fault Conditions

The exterior door handle is connected to the door latch with an actuating cable. When the exterior door handle is pulled, the actuating cable pulls on the latch lever. When the latch lever moves, the door latch releases, allowing the door to open.

Possible Causes

- Broken or binding cable/linkage
- Door handle reinforcement
- Door latch

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST B : A DOOR IS DIFFICULT OR DOES NOT OPEN FROM THE EXTERIOR DOOR HANDLE > PINPOINT TEST B : A DOOR IS DIFFICULT OR DOES NOT OPEN FROM THE EXTERIOR DOOR HANDLE

B1 CHECK THE LATCH OPERATION FROM BOTH DOOR HANDLES

Open and close the door using both the interior and exterior door handles.

Does the door open normally from one of the door handles?

Yes	If the door is difficult/does not open from only the exterior door handle, GO to B2 If the door is difficult/does not open from only the interior door handle, GO to Pinpoint Test C
------------	--

No	GO to B2
-----------	----------

B2 CHECK THE EXTERIOR DOOR HANDLE CABLE OPERATION

Disconnect the exterior door handle actuating cable from the door latch.

Operate the exterior door handle while observing the linkage and cable.

Are any of the exterior door handle components or linkages binding or broken?

Yes	REPAIR as necessary.
------------	----------------------