

Lead 1	Measurement / Action	Lead 2
C804-2		Ground

 **NOTE:** The BCM only supplies voltage to the actuator momentarily. It is important to monitor the test lamp while pressing the door lock control switch.

While pressing the door lock control switch in the unlock position, monitor the test lamp.

Does the test lamp momentarily illuminate?

Yes	INSTALL a new door latch in question. REFER to: Front Door Latch . REFER to: Rear Door Latch - SuperCrew .
------------	--

No	REPAIR the circuit.
-----------	---------------------

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST K : THE DOOR LOCKS OPERATE ONLY ONE WAY

Refer to Remote Keyless Entry and Alarm for schematic and connector information.

Normal Operations and Fault Conditions

REFER to: Handles, Locks, Latches and Entry Systems - System Operation and Component Description .

DDM/ PDM DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
B108F:23	Cabin Lock/Unlock Switch: Signal Stuck Low	Sets when the DDM/ PDM detects a short to ground from one of the door lock control switch input circuits.

Possible Causes

- Wiring, terminals or connectors
- Door lock control switch
- PDM
- DDM

Visual Inspection and Diagnostic Pre-checks

- Check the BCM fuse 3 (20A)