

(CMDTCs) from all modules.

Is DTC U0140 set in other modules?

Yes	
No	INSTALL a new DDM or PDM. REFER to: Driver Door Module (DDM) . REFER to: Passenger Door Module (PDM) .

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST AA : U0208:00

Normal Operation and Fault Conditions

The DDM/ PDM communicate with the DSM over the CAN. If the DDM/ PDM does not receive messages from the DSM, features such as the memory mirror position can be inoperative.

DDM/ PDM DTC Fault Trigger Conditions

DTC	Description	Fault Trigger Conditions
U0208:00	Lost Communication With "Seat Control Module A": No Sub-Type Information	Sets when the DDM/ PDM detects data messages are missing from the DSM.

Possible Causes

- Network communication concern
- DDM/ PDM
- DSM

DIAGNOSIS AND TESTING > LOCKS, LATCHES AND ENTRY SYSTEMS > PINPOINT TESTS > PINPOINT TEST AA : U0208:00 > PINPOINT TEST AA : U0208:00

AA1 VERIFY THE CUSTOMER CONCERN

Ignition ON.

Verify there is an observable symptom present.

Is an observable symptom present?

Yes	GO to AA2
No	The system is operating normally at this time. The DTC may have been set due to high network traffic or an intermittent fault condition.