



REMOVAL AND INSTALLATION > EXTERIOR REAR DOOR HANDLE - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FRONT DOOR LATCH > REMOVAL

All vehicles



NOTE: LH side shown, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .

2.

Remove the front door speaker retainers, disconnect the electrical connector and remove the front door speaker.

Torque

: 13 lb.in (1.5 Nm)

