

1.

Remove the tailgate release switch.

2.

If equipped, remove the tailgate light.

3.

If equipped, remove the rear camera and bracket.

4.

If equipped, remove the keyless entry rear antenna.



REMOVAL AND INSTALLATION > TAILGATE RELEASE HANDLE > INSTALLATION

1.

To install, reverse the removal procedure.

2.

If equipped, align the rear camera. Refer to: 360 Degree View Camera Alignment .

REMOVAL AND INSTALLATION > TAILGATE RELEASE SWITCH > REMOVAL

1.

Remove the tailgate release handle. Refer to: Tailgate Release Handle .

2.



NOTE: This step is only necessary when installing a new component.

Remove the tailgate release switch.

1.