


E193152

3.

Remove the running board assembly.

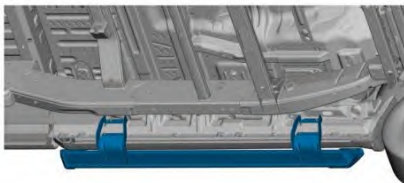

x2

E193153

REMOVAL AND INSTALLATION > RUNNING BOARD > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > RUNNING BOARD CONTROL MODULE (RBM) > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the loadspace trim panel. Refer to: Loadspace Trim Panel - SuperCab/SuperCrew .

2.

Disconnect the electrical connectors.