


E190809

3.

Using a flat blade screwdriver or equivalent, depress the tab to remove the module.

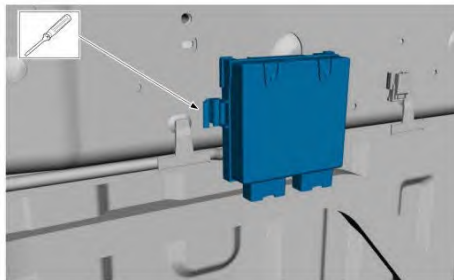

E190810

REMOVAL AND INSTALLATION > RUNNING BOARD CONTROL MODULE (RBM) > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > TAILGATE MOULDING > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1.

Remove the 8 screws from the tailgate liner.

Torque

: 28 lb.in (3.2 Nm)