

Broadcast Message	Originating Module	Message Purpose
Climate control requests	FDIM	The climate control requests message contains the heated seat request information.

FDIM Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Climate control button status	FCIM	The FCIM provides this message to the FDIM for the purpose of updating the displayed status of the heated seat buttons on the FDIM (touchscreen).

DESCRIPTION AND OPERATION > FRONT SEATS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > NETWORK MESSAGE CHART - CLIMATE CONTROLLED SEATS

SCME Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Climate control requests	FDIM	The climate control requests message contains the climate controlled seat request information.
Climate control requests	FCIM	The climate control requests message contains the climate controlled seat request information.

FDIM Network Input Messages

Broadcast Message	Originating Module	Message Purpose
Climate control button status	SCME	The SCME provides this message to the FDIM for the purpose of updating the displayed status of the climate controlled seat buttons on the FDIM (touchscreen).

DESCRIPTION AND OPERATION > FRONT SEATS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > NETWORK MESSAGE CHART - MULTI-CONTOUR FRONT SEATS

FDIM Network Input Messages