


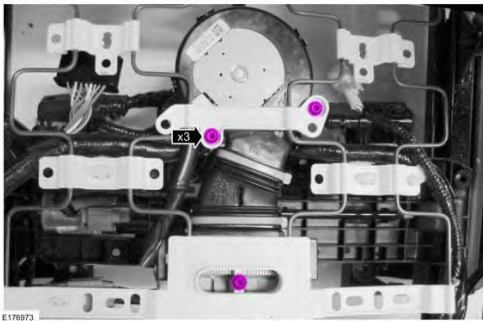

4.

Remove the front seat cushion blower motor screws.



5.

Remove the front seat cushion blower motor.

1.

Disconnect the front seat cushion blower motor electrical connector.

2.

Release the locking tabs.



REMOVAL AND INSTALLATION > FRONT SEAT CUSHION BLOWER MOTOR > INSTALLATION

1.