


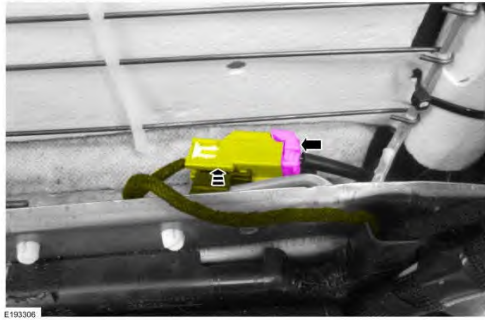

5.

Remove the seat power lumbar assembly.

1.

Release the lower retainers.

2.


Position the cushion foam to access the seat power lumbar assembly pin-type retainer.

3.

Remove the pin-type retainer.

4.

Release the upper J-hook.

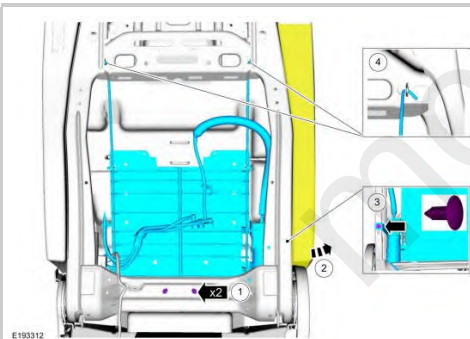

REMOVAL AND INSTALLATION > FRONT SEAT POWER LUMBAR ASSEMBLY - VEHICLES WITH: MULTI-CONTOUR SEATS > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FRONT SEAT TRACK > REMOVAL

1.

If equipped with manual lumbar, adjust the manual lumbar to the fully relaxed position.




2.

Remove the front seat cushion and cover as an assembly. Refer to: Front Seat Cushion Cover .

3.

Release the wire harness retainer(s) and position the wire harness(es) aside.

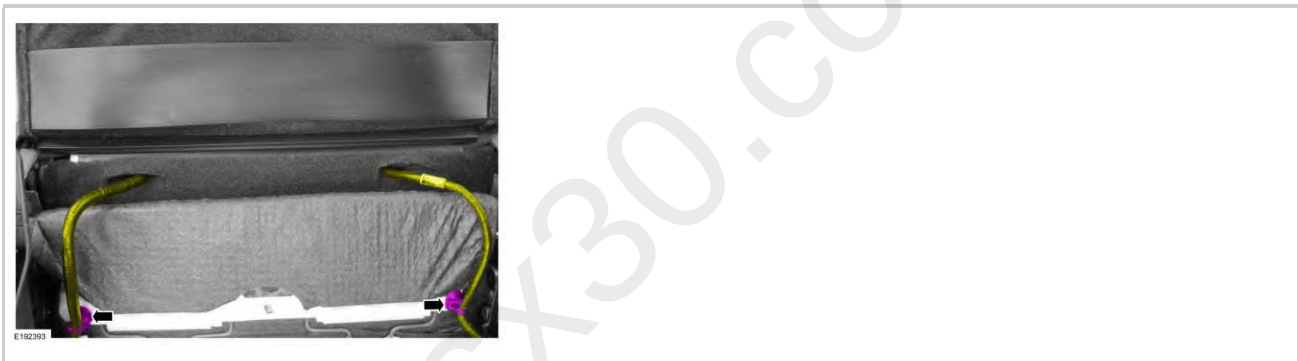

4.

If equipped with a multi-contour seat, remove the front seat cushion adjuster. Refer to: Front Seat Cushion Adjuster - Vehicles With: Multi-Contour Seats .

5.

 **NOTE:** This step is only necessary when the passenger seat is equipped with an original equipment (OE) OCS.

Remove the OCS. Refer to: Occupant Classification System (OCS) Sensor - Vehicles Without: Multi-Contour Seats . Refer to: Occupant Classification System (OCS) Sensor - Vehicles With: Multi-Contour Seats .

6.

If equipped with manual lumbar, position the cable away from the seat track.

Disconnect the cable from the manual lumbar actuator.