

Service Manual: INTERIOR TRIM AND ORNAMENTATION

REMOVAL AND INSTALLATION > A-PILLAR TRIM PANEL > REMOVAL

NOTE: LH side shown in illustration, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove and discard the assist handle bolt covers.



2.

Remove the A-pillar trim panel.

1.

Remove the bolts.

Torque

: 55 lb.in (6.2 Nm)

2.

Release the retainer.

3.

If equipped, disconnect the speaker electrical connector.

4.

Release the clips and remove the A-pillar trim panel.