


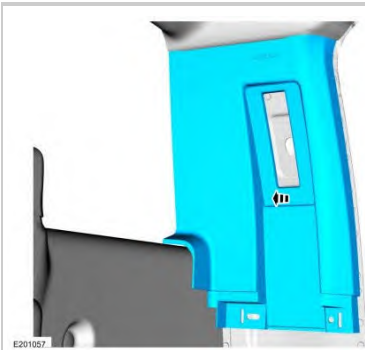

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - REGULAR CAB > INSTALLATION

1.

 **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - SUPERCAB > REMOVAL

 **NOTE:** LH side shown in illustration, RH side similar.

 **NOTE:** Removal steps in this procedure may contain installation details.

1.

 **NOTE:** The seat is removed for clarity.

Release the clips and remove the scuff plate trim panel.