


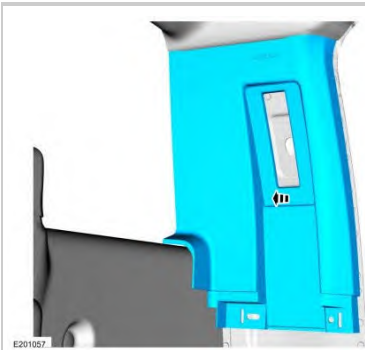

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - REGULAR CAB > INSTALLATION

1.

 **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - SUPERCAB > REMOVAL


 **NOTE:** LH side shown in illustration, RH side similar.

 **NOTE:** Removal steps in this procedure may contain installation details.

1.


 **NOTE:** The seat is removed for clarity.

Release the clips and remove the scuff plate trim panel.

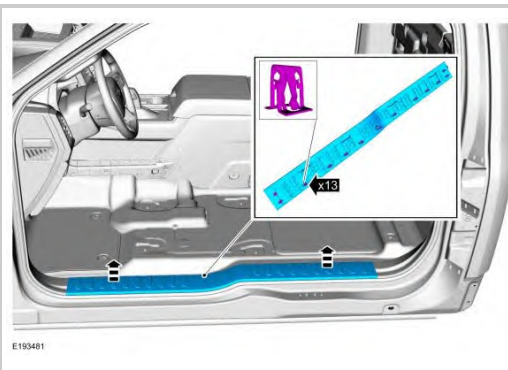

2.

Position aside the rear door weatherstrip.

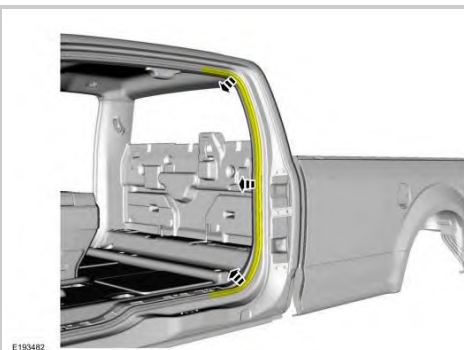

3.

Remove the bolt and position aside the seatbelt.

Torque

: 30 lb.ft (40 Nm)



4.

 **NOTE:** If the tether clip is damaged during removal, a new clip must be installed prior to installation of the panel.