

 **NOTE:** During installation make sure to install the clip by the scuffplate trim panel first and work upward on the trim panel to connect the other clips.


Remove the B-pillar trim panel.

1.

Release the clips.

2.

Release the tether clip and remove the B-pillar trim panel.

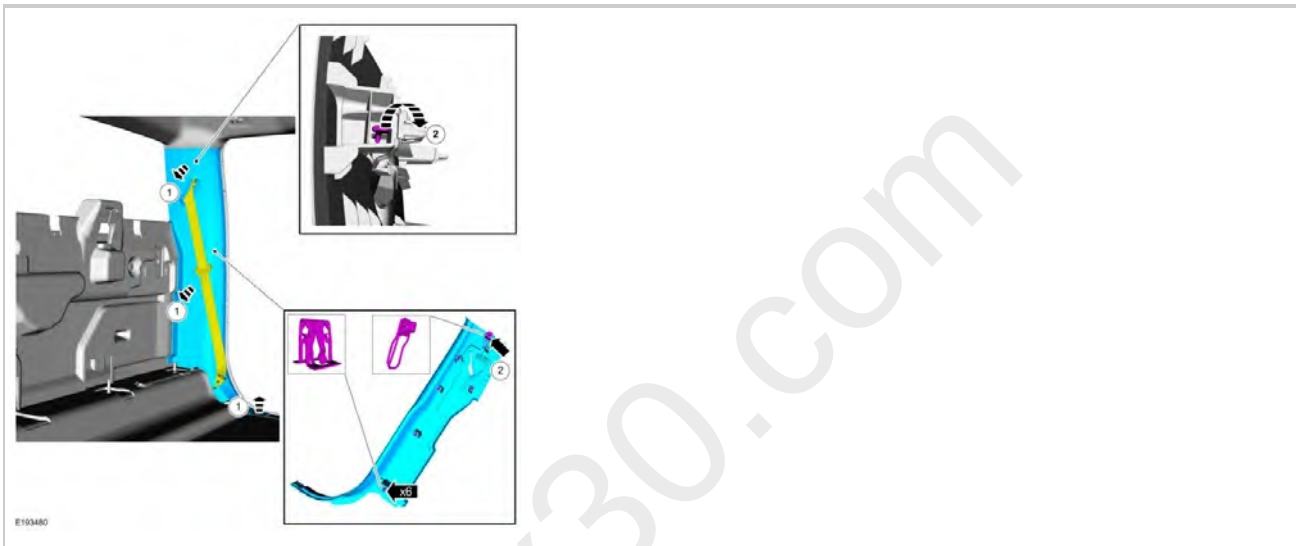

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - SUPERCAB > INSTALLATION

1.

 **NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > B-PILLAR TRIM PANEL - SUPERCREW > REMOVAL

 **NOTE:** LH side shown in illustration, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

Upper and Lower B-Pillar Trim Panels

1.


Remove the front door scuff plate trim panel.

1.

Release the clips and remove the front door scuff plate trim panel.


2.

If equipped. Disconnect the electrical connector.

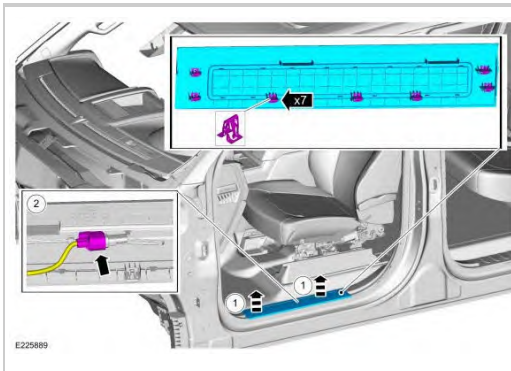


2.

Release the clips and remove the rear door scuff plate trim panel.

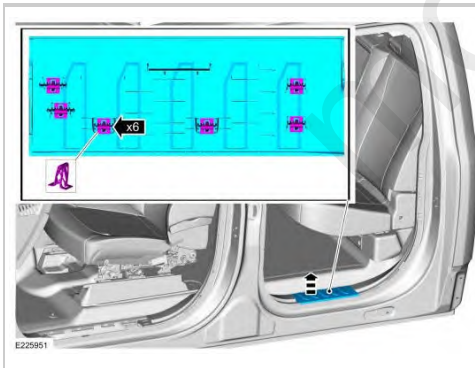

3.

Position aside the front door weatherstrip.

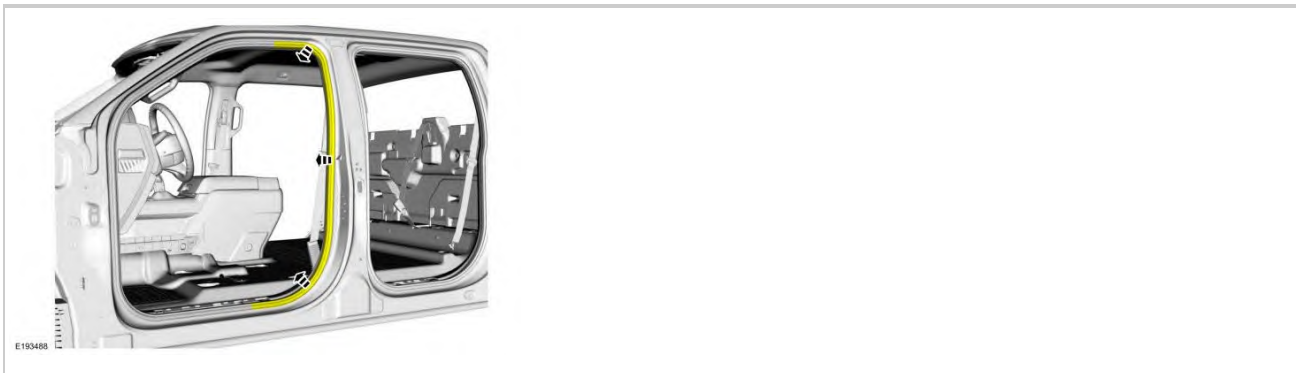

4.

Position aside the rear door weatherstrip.




5.

Release the clips and disengage the safety belt pretensioner boot from the pretensioner bezel.




6.

Remove the pretensioner bezel.

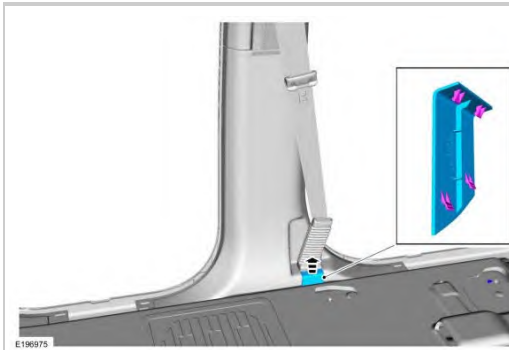

7.

Release the clips and remove the lower B-pillar trim panel.

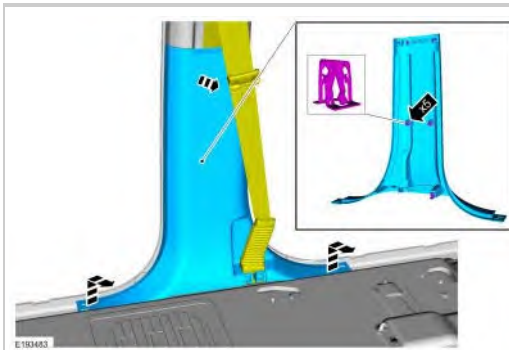

Upper B-Pillar Trim Panel

8.

Remove the safety belt D-ring bolt and position aside the front safety belt.

1.


Remove the safety belt D-ring trim cover.

2.

Remove the safety belt D-ring bolt and position aside the front safety belt.

Torque

: 30 lb.ft (40 Nm)

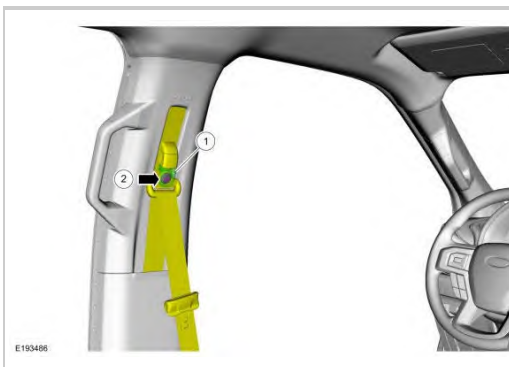

9.

Remove the assist handle.

1.

Remove the assist handle bolt covers.

2.

Remove the bolts.

Torque

: 106 lb.in (12 Nm)


3.

Remove the assist handle.



10.

Release the clips.

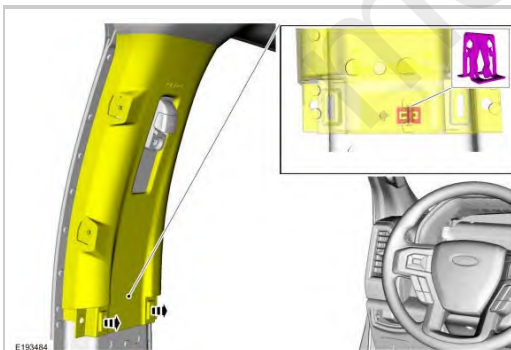

11.

Pull down on the upper B-pillar trim panel.