

REMOVAL AND INSTALLATION > HEADLINER - SUPERCREW > REMOVAL

NOTE: Steering wheel should be in the full inward and upward position for headliner removal.

1.

Remove the following items:

1.

On both sides, remove the A-pillar trim panels. Refer to: A-Pillar Trim Panel .

2.

On both sides, remove the B-pillar trim panels. Refer to: B-Pillar Trim Panel - SuperCrew .

3.

On both sides, remove the C-pillar trim panels. Refer to: C-Pillar Trim Panel .

4.

On both sides, remove the front seats. Refer to: Front Seat .

5.

If equipped, remove the front center seat. Refer to: Front Center Seat .

6.

If equipped, remove the floor console. Refer to: Floor Console .

7.

Remove the passenger side front door. Refer to: Front Door - Regular Cab/SuperCrew .

2.



NOTE: LH side shown in illustration, RH side similar.

On both sides. Remove the sun visor.

1.

Remove the retainer cover.

2.

Remove the retainer.

3.

Remove the sun visor.

4.

If equipped. Disconnect the electrical connector.



3.




NOTE: LH side shown in illustration, RH side similar.

On both sides. Remove the retainers and the sun visor clips.



4.

If equipped. Release the clips and remove the rain sensor outer covers.

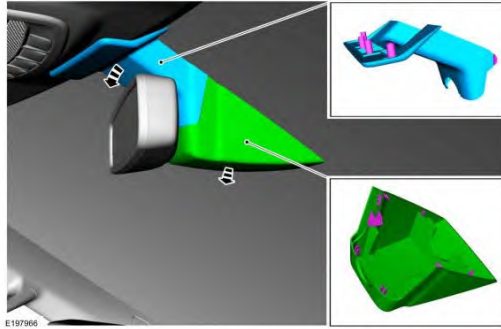


5.

If equipped. Disconnect the rear view mirror electrical connector.



6.

If equipped. Disconnect the rain sensor electrical connector.

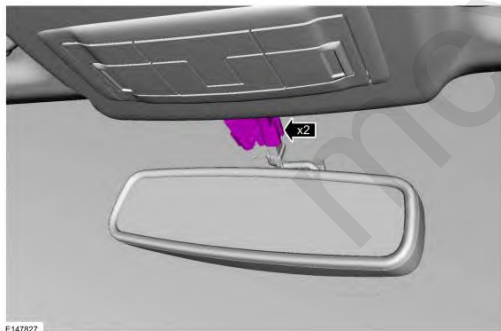

7.

On both sides. Remove and discard the garment hooks.

1.

Open the garment hook retainer cover.


2.

Remove the retainer and the garment hook.



8.

Disconnect the headliner wiring harness connectors and position aside the wiring harness.

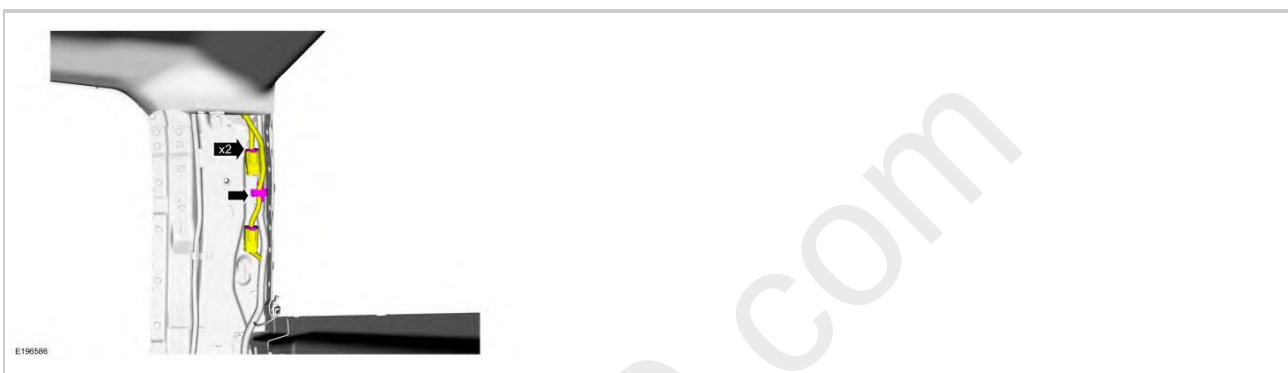

9.

 **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.

 **NOTE:** The striker should be in its lowest position for the latch to engage.

Fold the LH rear seat backrest down.

1.


Raise the seat cushion.

2.

Release the backrest latch.

3.

Fold the backrest down.

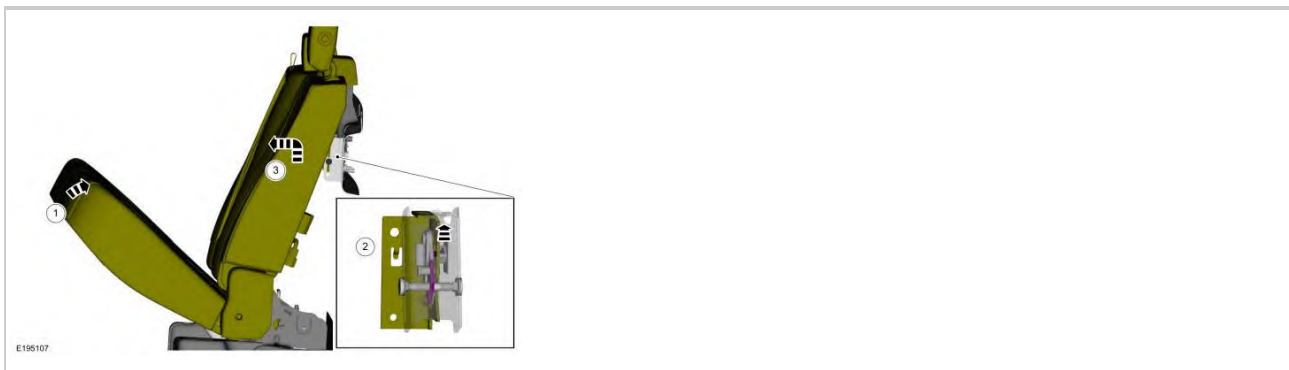


10.

Pull the backrest release strap and fold the RH rear seat backrest forward.



11.

Release the clips and lower the headliner.

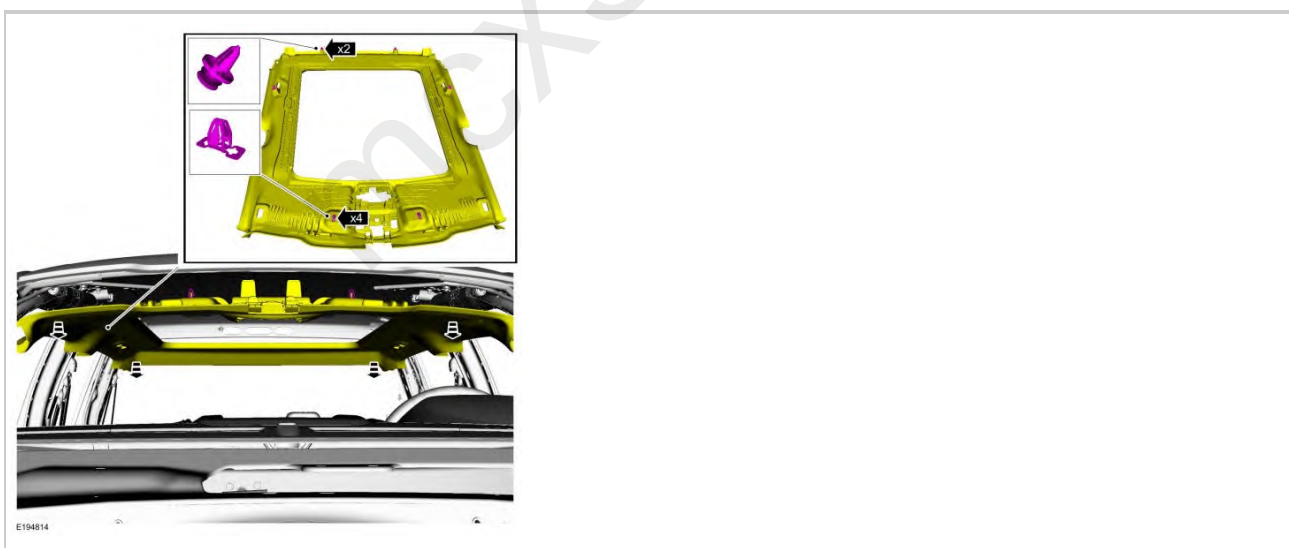

12.

Remove the headliner.