


DESCRIPTION AND OPERATION > PASSIVE ANTI-THEFT SYSTEM (PATS) - COMPONENT LOCATION

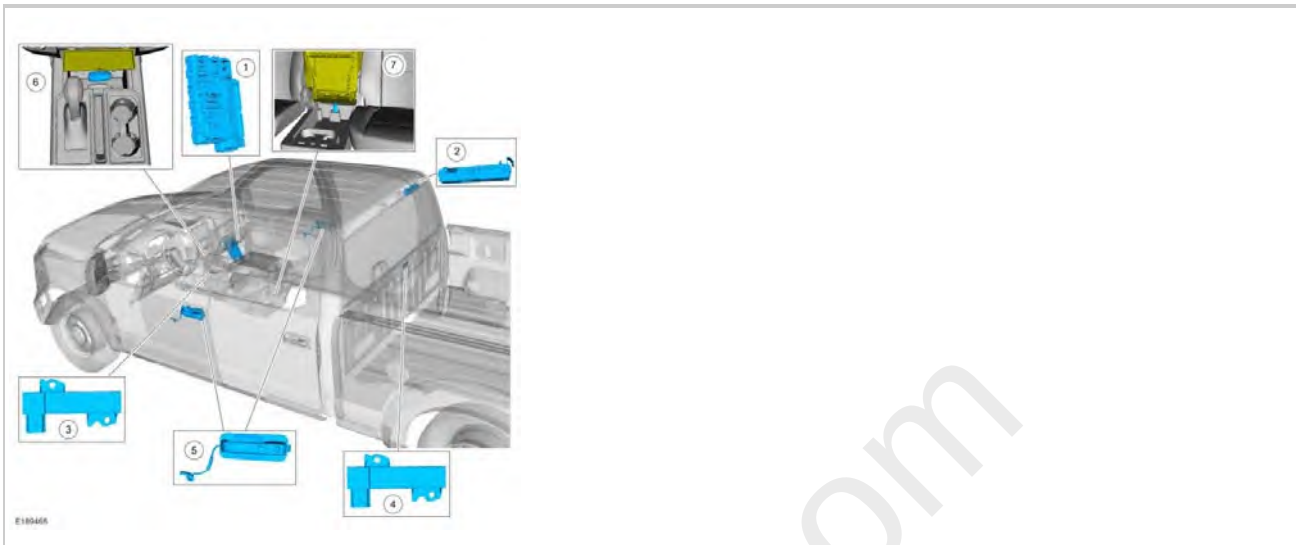

Item	Description
1	BCM
2	RTM
3	PATS center antenna
4	PATS rear antenna
5	Door handle antennas (exterior front door handles)
6	Passive key backup starting location (vehicles equipped with a floor console)
7	Passive key backup starting location (vehicles not equipped with a floor console)

DESCRIPTION AND OPERATION > PASSIVE ANTI-THEFT SYSTEM (PATS) - OVERVIEW > OVERVIEW

The PATS deters the vehicle from theft by preventing the vehicle from starting unless a valid programmed key is detected inside the vehicle when the START/STOP button is pressed.

The PATS does not disable an already running vehicle.

DESCRIPTION AND OPERATION > PASSIVE ANTI-THEFT SYSTEM (PATS) - SYSTEM