

Yes	INSTALL a new hood latch. REFER to: Hood Latch .
------------	--

No	GO to A2
-----------	----------

A2 CHECK THE HOOD AJAR SWITCH INPUT CIRCUIT FOR A SHORT TO GROUND

Ignition OFF.

Disconnect BCM C2280F .

Measure:

Positive Lead	Measurement / Action	Negative Lead
C127-2	Ω	Ground

Is the resistance greater than 10, 000 ohms?

Yes	GO to A3
------------	----------

No	REPAIR the circuit.
-----------	---------------------

A3 CHECK FOR CORRECT BCM (BODY CONTROL MODULE) OPERATION

Disconnect and inspect all BCM connectors.

Repair:

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect all BCM connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable TSB. If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no TSB addresses this concern,
------------	--

No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.
-----------	--