

D4 CHECK FOR CORRECT BCM (BODY CONTROL MODULE) OPERATION

Disconnect and inspect all the BCM connectors.

Repair:

corrosion (install new connector or terminals - clean module pins)

damaged or bent pins - install new terminals/pins

pushed-out pins - install new pins as necessary

Reconnect the BCM connectors. Make sure they seat and latch correctly.

Operate the system and determine if the concern is still present.

Is the concern still present?

Yes	CHECK OASIS for any applicable TSB. If a TSB exists for this concern, DISCONTINUE this test and FOLLOW TSB instructions. If no TSB addresses this concern,
No	The system is operating correctly at this time. The concern may have been caused by module connections. ADDRESS the root cause of any connector or pin issues.

REMOVAL AND INSTALLATION > INTRUSION SENSOR > REMOVAL

1.

Remove the overhead console. REFER to: Overhead Console .

2.

Detach the wire harnesses from the retainers, disconnect the retainers and remove the intrusion sensor assembly.

