


1.

Disconnect the electrical connector.

2.

Release the tabs and remove the rear door ajar switch.

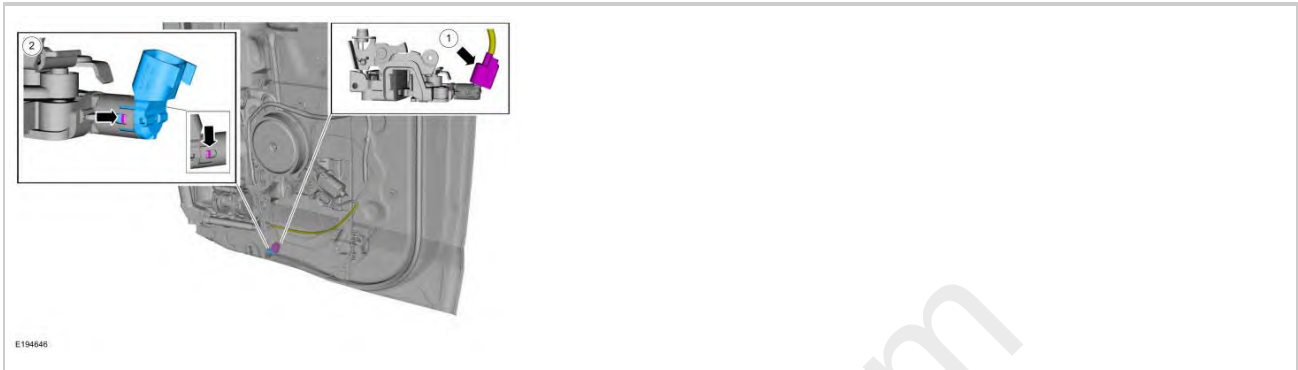

REMOVAL AND INSTALLATION > REAR DOOR AJAR SWITCH - SUPERCAB > INSTALLATION

1.

To install, reverse the removal procedure.