

: 41 lb.ft (55 Nm)



11.

Install the tail lamp assembly. Refer to: Rear Lamp Assembly .

12.

Install the tailgate.

REMOVAL AND INSTALLATION > PICKUP BOX FLOOR PANEL > REMOVAL

1.

Both Sides: Remove the pickup box outer side panel. Refer to: Pickup Box Outer Side Panel .

2.

Both Sides: Remove the pickup box corner reinforcement. Refer to: Pickup Box Corner Reinforcement .

3.

Both Sides: Remove the pickup box inner side panel. Refer to: Pickup Box Inner Side Panel .

4.

Both Sides: Remove the rear wheelhouse. Refer to:

5.

Remove the pickup box front panel. Refer to: Pickup Box Front Panel .

REMOVAL AND INSTALLATION > PICKUP BOX FLOOR PANEL > INSTALLATION

1.

Install the pickup box front panel. Refer to: Pickup Box Front Panel .

2.