

HEATS CORRECTLY BUT THE INDICATOR DOES NOT ILLUMINATE WHEN ACTIVATED

D1 CHECK THE HEATED SEAT INDICATOR CIRCUITS FOR A SHORT TO GROUND

Ignition OFF.

Disconnect Heated Rear Seat Module C3304A .

Disconnect Heated Rear Seat Switch C3182 .

Measure:

Positive Lead	Measurement / Action	Negative Lead
C3304A-4	Ω	Ground
C3304A-5	Ω	Ground

Are the resistances greater than 10, 000 ohms?

Yes	GO to D2
No	REPAIR the circuit in question.

D2 CHECK THE HEATED SEAT INDICATOR CIRCUITS FOR AN OPEN

Measure:

Positive Lead	Measurement / Action	Negative Lead
C3304A-4	Ω	C3182-6
C3304A-5	Ω	C3182-7

Are the resistances less than 3 ohms?

 
Yes	GO to D3
No	REPAIR the circuit in question.

D3 CHECK THE HIGH HEAT INDICATOR

Disconnect Heated Rear Seat Module C3304B .

Connect Heated Rear Seat Switch C3182 .

Connect:

Positive Lead	Measurement / Action	Negative Lead
C3304A-5		C3304B-1