


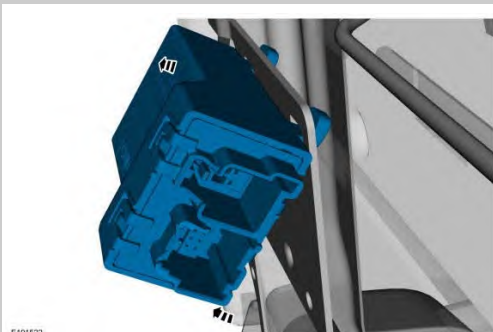

5.

Rotate and remove the heated seat module.



REMOVAL AND INSTALLATION > HEATED REAR SEAT MODULE - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > HEATED REAR SEAT SWITCH - SUPERCREW

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > HEATED REAR SEAT SWITCH - SUPERCREW > REMOVAL

1.

Using an interior trim remover, lift the cup holder trim and release the locking clips. Remove the cup holder trim. Use the General Equipment: Interior Trim Remover