



2.


Remove the heated seat switch.

1.

Disconnect the power point electrical connector.

2.

Disconnect the heat seat switch electrical connector. Release the switch tabs and slide the switch rearward.

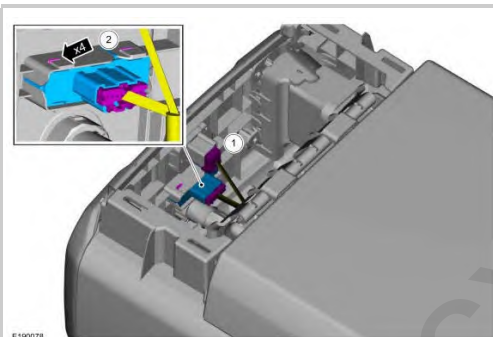

REMOVAL AND INSTALLATION > HEATED REAR SEAT SWITCH - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR SEAT ARMREST - SUPERCREW > REMOVAL

1.

Fold forward the RH seat backrest.