


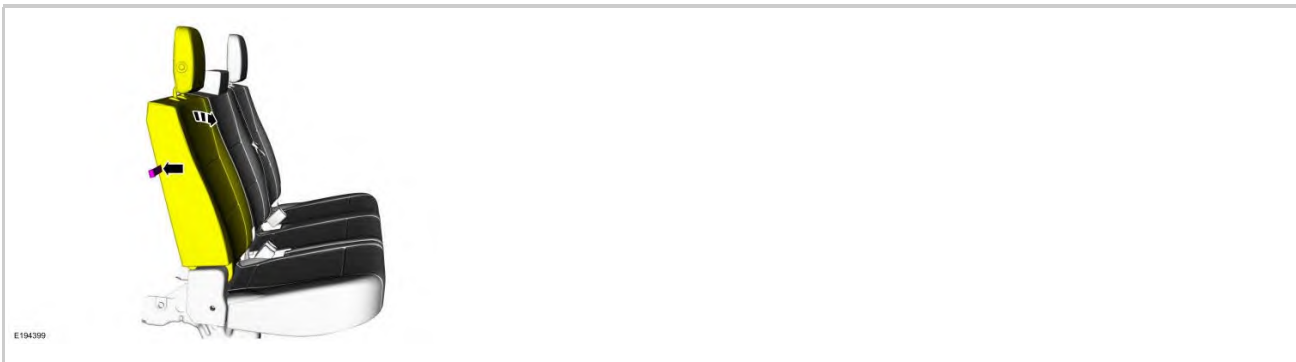

2.

Remove the armrest.

1.

Through the opening in the backrest cover and foam pad, remove the armrest fastener.

Torque

: 18 lb.ft (25 Nm)

2.

Lift and rotate the armrest to release the guide pins from both sides of the armrest.



REMOVAL AND INSTALLATION > REAR SEAT ARMREST - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR SEAT BACKREST - SUPERCREW > REMOVAL



NOTE: LH shown, RH similar.