



NOTE: Follow the unique instructions or graphics for this step in installation.

While pressing the primary and secondary head restraint release buttons, lift and remove head restraint(s).



2.



NOTE: Typical head restraint guide sleeve shown, others similar.

Release the head restraint guide sleeves locking tabs, using a flat head screwdriver. Remove the head restraint guide sleeves and discard. Use the General Equipment: Flat Headed Screw Driver



REMOVAL AND INSTALLATION > REAR HEAD RESTRAINT GUIDE SLEEVE > INSTALLATION

1.



NOTE: Always install new head restraint guide sleeves. Difficult adjustment of the head restraint may occur. Failure to follow these instructions may result in component failure.



NOTE: The head restraint guide sleeves are not interchangeable. Failure to install