

Route center safety belt through the cushion opening.

2.

Remove the seat.



REMOVAL AND INSTALLATION > REAR SEAT LH - SUPERCAB > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR SEAT RH - SUPERCAB > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the seat front fasteners.

1.

Using the seat cushion latch handle, raise the cushion.

2.

Remove the fasteners.

Torque

: 19 lb.ft (26 Nm)