



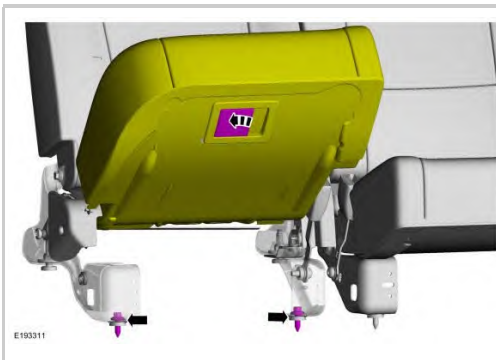

2.

Pull the backrest release strap and fold the seat backrest forward.

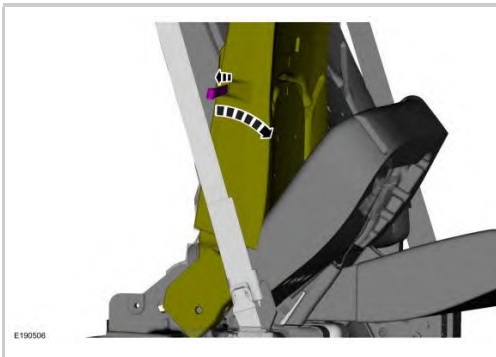

3.

Remove the seat rear nuts. Remove the seat.

Torque

: 59 lb.ft (80 Nm)



REMOVAL AND INSTALLATION > REAR SEAT RH - SUPERCAB > INSTALLATION

1.

To install, reverse the removal procedure.