



9.

Remove the seat.

1.

Route the center safety belt through the cushion opening.

2.

Remove the seat.



REMOVAL AND INSTALLATION > REAR SEAT LH - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR SEAT RH - SUPERCREW > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

All vehicles

1.

Remove the seat front fasteners.