


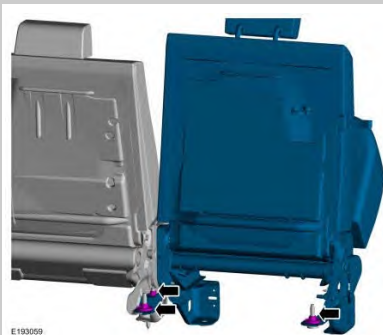

REMOVAL AND INSTALLATION > REAR SEAT RH - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

2.

If the SRS has been depowered, repower the SRS. Refer to: Supplemental Restraint System (SRS) Repowering .

REMOVAL AND INSTALLATION > REAR SEAT CUSHION COVER - SUPERCAB

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > REAR SEAT CUSHION COVER - SUPERCAB > REMOVAL



NOTE: LH shown, RH similar.

1.

Remove the rear seat. Refer to: Rear Seat RH - SuperCab . Refer to: Rear Seat LH - SuperCab .

2.

Using an interior trim tool, remove the latch bezel from the seat cushion. Use the General Equipment: Interior Trim Remover