


Release the hook-and-arrows.

2.

Release the hook-and-loop strips.

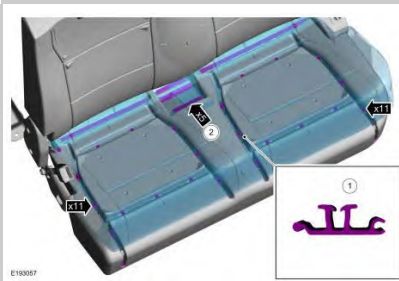

REMOVAL AND INSTALLATION > REAR SEAT CUSHION COVER - SUPERCAB > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > REAR SEAT CUSHION COVER - SUPERCREW

Special Tool(s) / General Equipment

Interior Trim Remover

REMOVAL AND INSTALLATION > REAR SEAT CUSHION COVER - SUPERCREW > REMOVAL



NOTE: LH shown, RH similar.

1.

Remove the rear seat. Refer to: Rear Seat RH - SuperCrew . Refer to: Rear Seat LH - SuperCrew .

2.

Using an interior trim tool, remove the latch bezel from the seat cushion. Use the General Equipment: Interior Trim Remover