

or the hook-and-arrow can be torn from the foam pad.

Remove the backrest cover from the foam pad.

1.

Release the hook-and-arrows.

2.

Release the hook-and-loop strip.



REMOVAL AND INSTALLATION > REAR SEAT BACKREST COVER - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.