

The LH and RH exterior mirrors may be equipped with a puddle lamp. For repair procedures and information on the mirror-mounted puddle lamps, Refer to: Interior Lighting .

Exterior, BLIS ®/ CTA Light Emitting Diodes (LEDs)

The LH and RH exterior mirrors may be equipped with a BLIS ®/ CTA LED. For repair procedures and information on the mirror-mounted BLIS ®/ CTA Light Emitting Diodes (LEDs), Refer to: Blind Spot Information System .

Exterior, Side Cameras

The LH and RH exterior mirrors may be equipped with a side camera. For repair procedures and information on the mirror-mounted side camera, Refer to: Parking Aid .

Interior

This vehicle may be equipped with a manual or auto-dimming interior rear view mirror. The manual dimming interior mirror has a lever at the bottom of the mirror assembly that must be pushed forward or pulled rearward to change the reflectance of the interior mirror glass. During nighttime conditions, the auto-dimming interior mirror automatically darkens the mirror glass when headlamps are detected from behind the vehicle to reduce unwanted glare.

DESCRIPTION AND OPERATION > REAR VIEW MIRRORS - SYSTEM OPERATION AND COMPONENT DESCRIPTION

System Operation

DESCRIPTION AND OPERATION > REAR VIEW MIRRORS - SYSTEM OPERATION AND COMPONENT DESCRIPTION > SYSTEM DIAGRAM - EXTERIOR, POWER, WITHOUT MEMORY



Network Message Chart

Module Network Input Messages - PDM

Broadcast Message	Originating Module	Message Purpose
Passenger mirror command	DDM	Contains the movement requests for the RH exterior mirror glass generated by the exterior mirror control switch.