



REMOVAL AND INSTALLATION > EXTERIOR REAR DOOR HANDLE - SUPERCREW > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FRONT DOOR LATCH > REMOVAL

All vehicles



NOTE: LH side shown, RH side similar.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .

2.

Remove the front door speaker retainers, disconnect the electrical connector and remove the front door speaker.

Torque

: 13 lb.in (1.5 Nm)



3.

Remove the front door watershield.



Vehicles with power windows

4.

Lower the front door window glass.

1.

Connect the front door window control switch.


2.

Lower the front door window glass.



5.

Release the retaining clips from front door window glass.

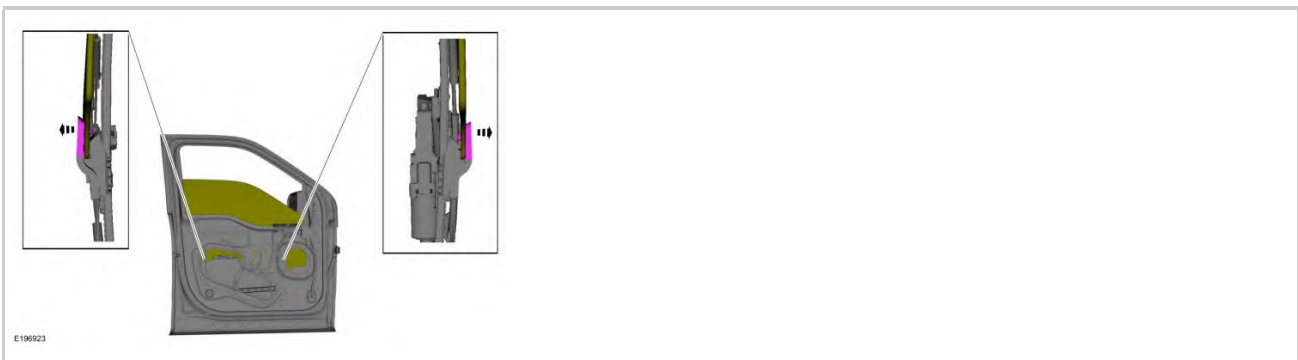

Vehicles with manual windows

6.

Lower the front door window glass.

1.

Partially install the window crank handle.

2.

Lower the front door window glass.



7.

Release the retaining clips from front door window glass.



All vehicles

8.


Raise the front door window glass and tape in place.

1.

Raise the front door window glass.

2.

Tape the front door window glass in place.

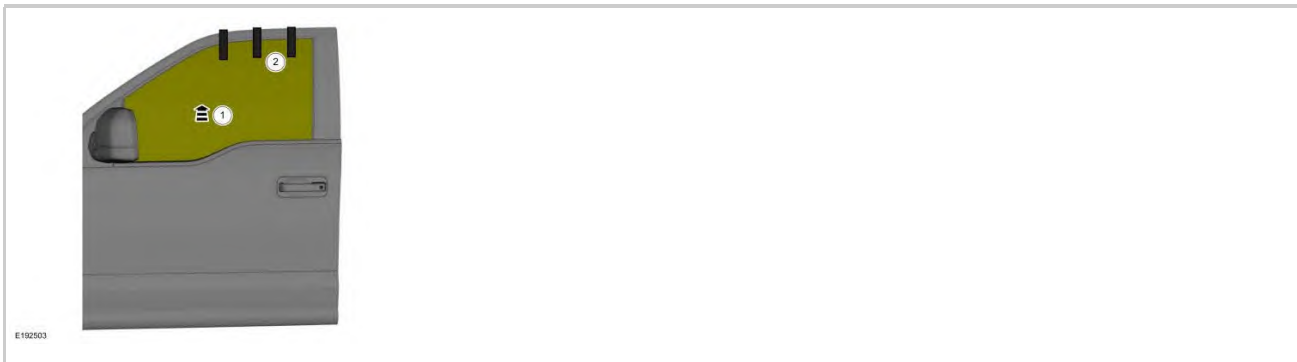

9.

Position the front door window regulator aside.

1.

Remove the window regulator nuts.

Torque

: 93 lb.in (10.5 Nm)

2.

Position the front door window regulator aside.



10.

Remove the exterior front door handle. Refer to: Exterior Front Door Handle .

11.

Remove the front door latch bolts.

Torque

: 71 lb.in (8 Nm)



12.

Remove the front door window run bolts.

Torque

: 71 lb.in (8 Nm)



13.



NOTE: The front door is shown transparent for clarity.

Remove the front door latch.

1.

Route the cable through the inner door.

2.

If equipped, disconnect the power door lock actuator electrical connector.

3.


Route the lock rod through the inner door.

4.

Disconnect the door ajar switch electrical connector.

5.

Remove the front door latch.

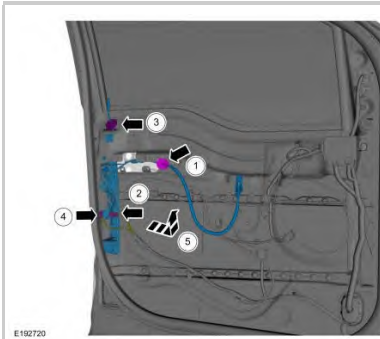

14.



NOTE: This step is only necessary when installing a new component.

Remove the door latch from the front door glass run and bracket.



15.



NOTE: This step is only necessary when installing a new component.

Remove the cables and lock rod.

1.

Remove the lock rod from the latch.

2.

Detach the interior door handle cable from the retaining bracket.

3.

Remove the interior door handle cable from the latch.

4.

Detach the exterior door handle cable from the retaining bracket.