


5.

Remove the exterior door handle cable from the latch.

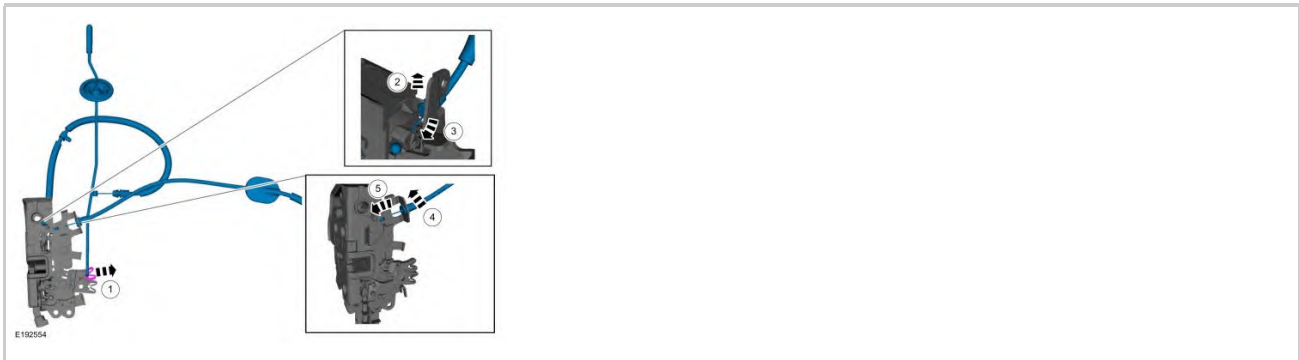

REMOVAL AND INSTALLATION > FRONT DOOR LATCH > INSTALLATION

All vehicles

1.

To install, reverse the removal procedure.

Vehicles with power windows

2.



NOTE: This step is only necessary when installing a new component.

Carry out the power door window initialization. Refer to: Power Door Window Initialization .

REMOVAL AND INSTALLATION > FRONT DOOR LOCK CONTROL SWITCH > REMOVAL



NOTE: LH side shown, RH side similar.

1.

Remove the front door trim panel. Refer to: Front Door Trim Panel .

2.

Remove the front door lock control switch.

1.

Release the retaining clips.

2.