



REMOVAL AND INSTALLATION > ROOF OPENING PANEL BLIND > INSTALLATION

1.

To install reverse the removal procedure.

REMOVAL AND INSTALLATION > ROOF OPENING PANEL CONTROL SWITCH > REMOVAL

1.

The roof opening panel control switch is replaced as an assembly with the overhead console.
REFER to: Overhead Console .

REMOVAL AND INSTALLATION > ROOF OPENING PANEL CONTROL SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > ROOF OPENING PANEL FRAME > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the air deflector. REFER to: Air Deflector .

2.